

# FLOATING GLASS SHELVES INSTALLATION INSTRUCTIONS

crest  
showers



## RECTANGLE SHELVES

SIZE	100 x 250
1 SHELF PACK	A8131
2 SHELF PACK	A8250
3 SHELF PACK	A8372

## TRIANGLE SHELVES

SIZE	200 x 200
1 SHELF PACK	A8127
2 SHELF PACK	A8247
3 SHELF PACK	A8368

## ELLIPTICAL SHELVES

SIZE	150 x 300
1 SHELF PACK	A8129
2 SHELF PACK	A8249
3 SHELF PACK	A8370

## CONTEMPORARY SHELVES

SIZE	150 x 150	200 x 200	250 x 250
1 SHELF PACK	A8123	A8121	A8125
2 SHELF PACK	A8243	A8241	A8245
3 SHELF PACK	A8364	A8362	A8366

Crest Showers Floating Glass Shower Shelf can be installed in any corner of a glass or tile wall. If two shelves are installed in the same corner, ideal shelf heights off the floor are 1200 & 1600mm. When installed in different corners, an ideal height is 1400mm off the floor.

When installing onto Seratone, Hardiglaze or Sim, apply masking tape to the liner then stick the stabiliser block to the masking tape. This makes the blocks easier to remove and protects the wall board surface.

We **DO NOT** recommend installing these on acrylic liners, due to adhesion difficulties. If you do wish to use on an acrylic surface, ensure the acrylic liner where you are mounting the footrest is roughened with sandpaper and extra time is taken before footrest is used.

**IMPORTANT:** Protect floor until adhesive has cured in case of the unlikely event that shelf/shower is disturbed and shelf

## PARTS LIST

### INCLUDED

1. 1 x Adhesive
2. Stabiliser Blocks
3. Spatula

### NEEDED

1. Masking Tape
2. 1 x Caulking Gun


## INSTALLATION INSTRUCTIONS

### 1. PREPARATION

Clean area shelf is being adhered to ensuring it is free of any dust, soap scum, cleaners or any other substance.


### 2. STABILISER BLOCKS

Remove backing from stabiliser blocks and press firmly onto wall.

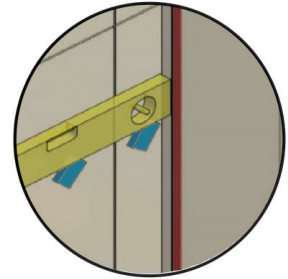


### 3. LEVEL

Place shelf in position and check for level. Optional - apply masking tape to shelf/wall.

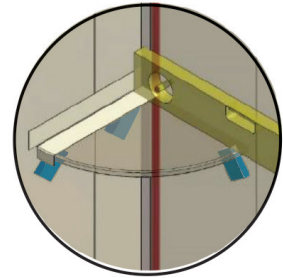


### 4. ADHESIVE

Remove shelf and put a thin bead of adhesive down both edges of shelf.

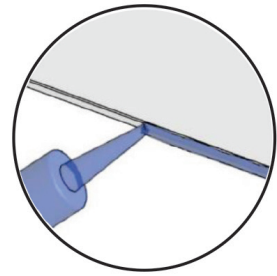


### 5. PLACEMENT

Carefully place shelf on stabiliser blocks and gently push into corner. Check for level.

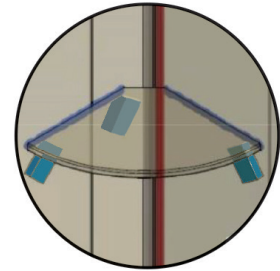

### 6. CLEANING

Clean up adhesive with spatula. Remove masking take.

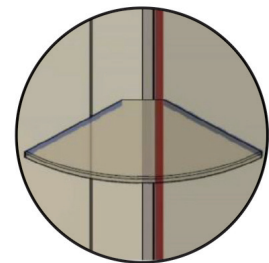

### 7. CURING

After 24-48 hours remove stabiliser blocks.